

FIG. 1

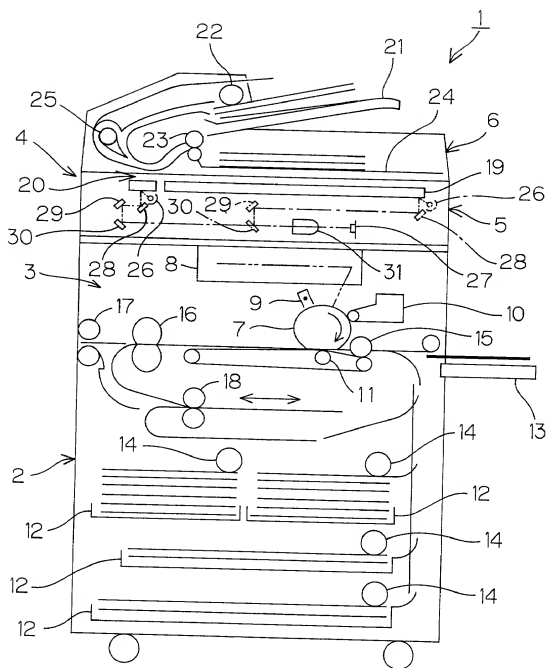


FIG. 2

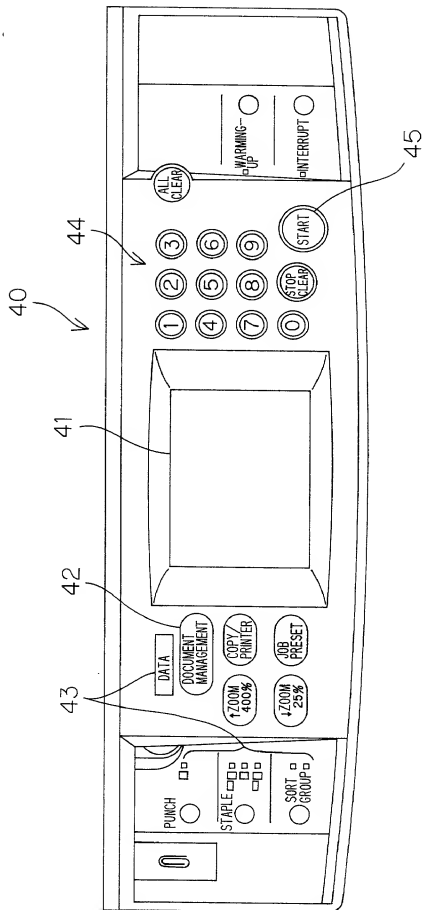


FIG. 3

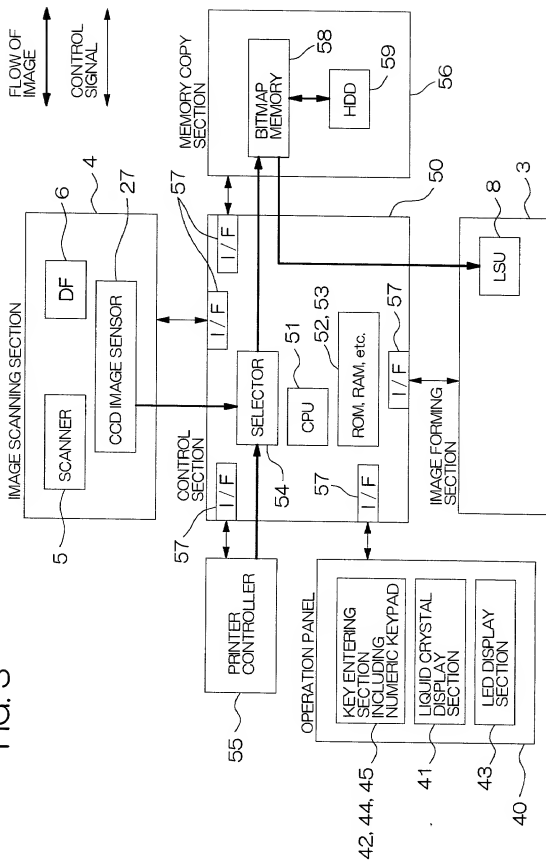


FIG. 4

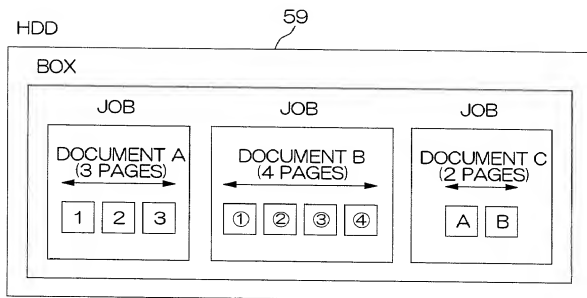


FIG. 5 (a)

FIG. 5 (a) is the main menu screen. At the top, there are four tabs: BASIC (selected), ZOOM, EXTENSION, and DEFAULT. Below the tabs, it says "READY TO COPY" and "1". On the left, there is a vertical list of options: 1 A4, 2 B4, 3 B5, and 4 A4. To the right of this list is a "BOTH-SIDE-COPY" button (labeled 86) and a "MANUAL PAPER FEED" button. Further right, there is an "APS MODE 100%" display. Below these are three rows of buttons: "MIX", "CHARACTER", and "PHOTO" (grouped by bracket 64); a row of five small square icons (grouped by bracket 63); and "LIGHT", "AUTO MODE", and "DARK" (grouped by bracket 62). A dashed line labeled 61 encloses the left-side options and the "BOTH-SIDE-COPY" button.

FIG. 5 (b)

FIG. 5 (b) is the "DOCUMENT MANAGEMENT" screen. It features a title bar with a question mark icon. Below the title bar are two buttons: "FORM OVERLAY" and "RETURN". Underneath are "MODIFIED COPY" and "QUICK PRINTING". The main area contains three boxes: "VIRTUAL MAIL BOX", "JOB COMBINATION BOX" (which is highlighted with a shaded background), and "SHARED DATA BOX". At the bottom, there are "STORE" and "BOX CALL" buttons. A dashed line labeled 66 points to the "JOB COMBINATION BOX", and a dashed line labeled 67 points to the "BOX CALL" button.

FIG. 5 (c)

FIG. 5 (c) is the "JOB COMBINATION BOX" screen. It has a title bar. Below the title bar are four tabs: 61-70 (selected), 71-80, 81-90, and 91-100. To the right of the tabs is a "RETURN" button. The main area contains two columns of checkboxes. The left column lists: 61 Box Name R, 62, 63, 64 Box Name D, and 65. The right column lists: 66 Box Name F, 67 Box Name G, 68, 69, and 70 Box Name J. At the bottom right, there is a "SETUP" button. A dashed line labeled 68 points to the "SETUP" button.

FIG. 5 (d)

FIG. 5 (d) is the "ENTER THE KEYWORD BY NUMERIC KEYPAD" screen. It has a title bar. Below the title bar is a "RETURN" button. The main area contains a row of eight empty square boxes for entering a keyword. At the bottom right, there is a "SETUP" button. A dashed line labeled 69 points to the "SETUP" button.

TO FIG.6(e)



FIG. 7

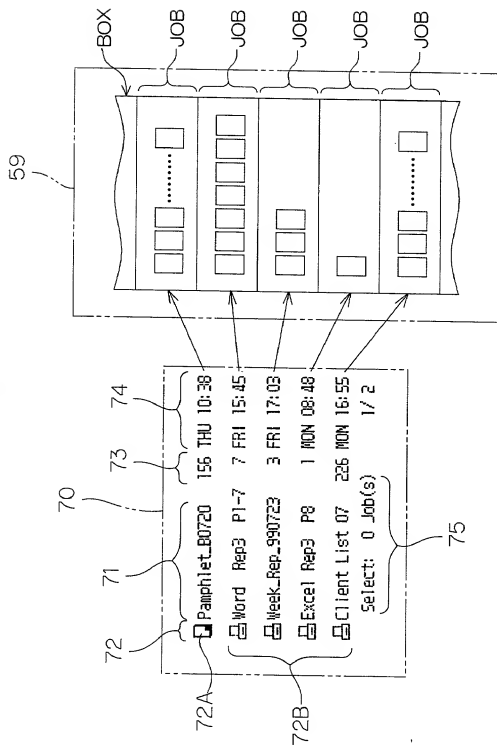


FIG. 8

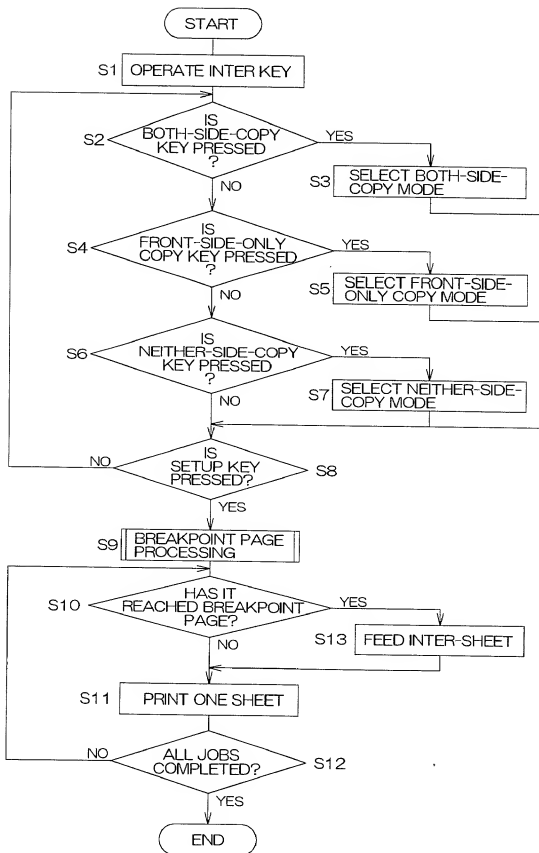




FIG.9(a)

60      65

BASIC	ZOOM	EXTENSION	DEFAULT
SHEET MODE SELECT THE SHEET MODE			RETURN
79A <input type="checkbox"/>			
79 COVER			
80A <input type="checkbox"/>			
80 INTER			
81A <input type="checkbox"/>			
81 CHAPTER			

FIG.9(b)

BASIC	ZOOM	EXTENSION	DEFAULT
SHEET MODE SELECT THE SHEET MODE			RETURN
79 <input type="checkbox"/>			
79 COVER			
80A <input checked="" type="checkbox"/>			
80 INTER	82 BOTH-SIDE	83 FRONT-SIDE-ONLY	84 NEITHER-SIDE
81 <input type="checkbox"/>			
81 CHAPTER			


FIG.9(c)

BASIC	ZOOM	EXTENSION	DEFAULT
SHEET MODE SELECT THE SHEET MODE			RETURN
<input checked="" type="checkbox"/>	FRONT      BACK		
COVER	BOTH-SIDE	FRONT-SIDE-ONLY	NEITHER-SIDE
<input checked="" type="checkbox"/>	BOTH-SIDE	FRONT-SIDE-ONLY	NEITHER-SIDE
INTER			
<input checked="" type="checkbox"/>	PAGE NUMBER INPUT		
CHAPTER			85 SETUP

FIG.9(d)

BASIC	ZOOM	EXTENSION	DEFAULT
ENTER PAGE NUMBER BY NUMERIC KEYPAD. WHEN IT'S DONE, PRESS SETUP KEY			RETURN
INSERT SHEET			
_ _ 5		88 PAGE DETERMINED	
		89 NEXT	
		SETUP	

FIG. 10

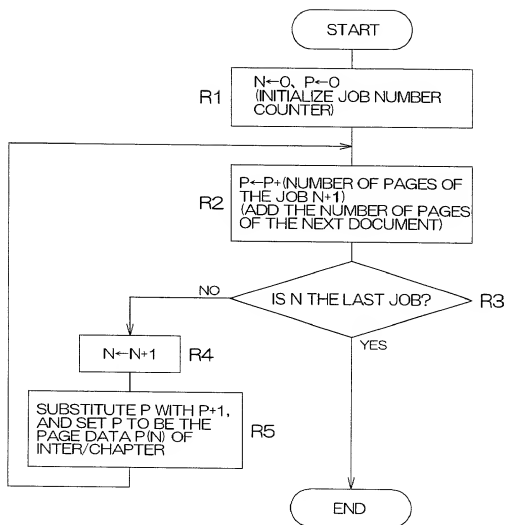

2025 RELEASE UNDER E.O. 14176

FIG. 11

